IMPORTANT: Pack carefully in original package if possible.We are not responsible for damage incurred in returning items for repair.A letter stating your exact street addres, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt a sproof of date of purchase

www.pyleaudio.com

www.pyleaudio.com

User's Manual

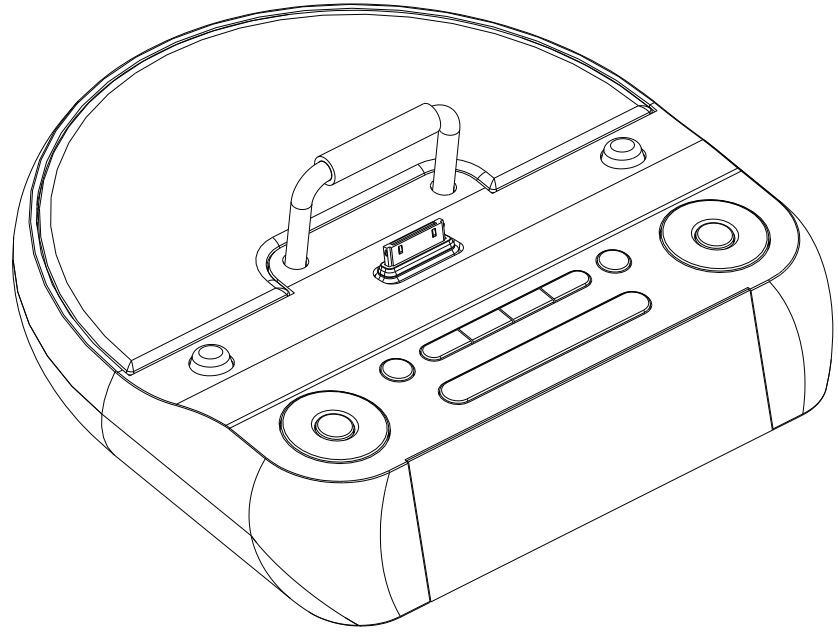

PICL90PAD

iPad/iPhone/iPod Docking Speaker System w/ Alarm Clock and FM Radio

iPhone Docking System

www.pyleaudio.com

KNOW THESE SAFETY SYMBOLS

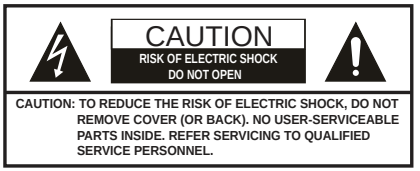
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should notbe placed on this apparatus.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from beingwalked on or pinched, particularly atplugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Portable Cart Warning

12. Unplug this apparatus during lightningstorms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cord or plugis damaged, liquid has been spilled orobjects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Battery usage CAUTION – To prevent battery leakage which may result inbodily injury, property damage, or damage to the apparatus:
    - Install all batteries correctly, + and -as marked on the apparatus.
    - Do not mix batteries (old and new or carbon and alkaline, etc).
    - Remove batteries when the unit is not used for a long time.
    - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
15. Apparatus shall not be exposed to dripping or splashing.
16. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
17. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Hearing safety

Listen at a moderate volume.

- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this,set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, evenat normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Made for iPod iPhone iPad

"Made for iPod," "Made for iPhone," and"Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively,and has been certified by the developer to meet Apple performance standards. Apple is not responsible for he operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.
iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Compatible iPod/iPhone/iPad

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano(6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone
- iPad
- iPad 2

Features

- Play and charge your iPod/iPhone/iPad simultaneously
- FM radio with 20 preset stations
- 3.5mm AUX IN jack for portable music player
- Clock synchronization with iPod/iPhone/iPad when docked
- Set your iPod/iPhone/iPad music or radio tunes as wake-up alarm
- 6W RMS total output power

What's in the box

Check and identify the contents of your package:

- 1 x AC Adapter
- Main unit
- 1 x 3.5mm stereo audio link cable
- 2 x AAA Batteries
- User manual

Overview of the main unit

1. ▲ & ▼
Navigate through the menus on a docked iPod/iPhone/iPad.
Select a radio station.

2.OK
Confirm selection.

3.MENU/SYNC
Control iPod/iPhone menu.
Synchronize the time with the iPod/iPhone/iPad.

4.TIME SET
Set the clock.

5. 🔔1 & 🔔2 **(ALARM1 & ALARM2)**
Set the alarm timer.
Turn off the alarm tone.
View alarm settings.

6.STANDBY
Turn on the unit or switch to standby mode.

7.INPUT
Selecting the input source.

8.SNOOZE/DIMMER
Adjust the display brightness.
Repeat the alarm.

9.SLEEP
Set the sleep timer.

10.MEMORY
Store the radio station.

11.VOL+ & VOL-
Increase or decrease the volume.

12. ⏯
Start or pause iPod /iPhone/iPad playback.

13. ⏮ & ⏭
Skip to the previous/next audio file.
Select a preset radio station.
Adjust time.

14.Dock for iPod/iPhone/iPad
Load an iPod/iPhone/iPad.

15.DC 5V
DC power in jack.

16.AUX IN
Jack for an external audio device.

17.FM ANT
Improve FM reception.

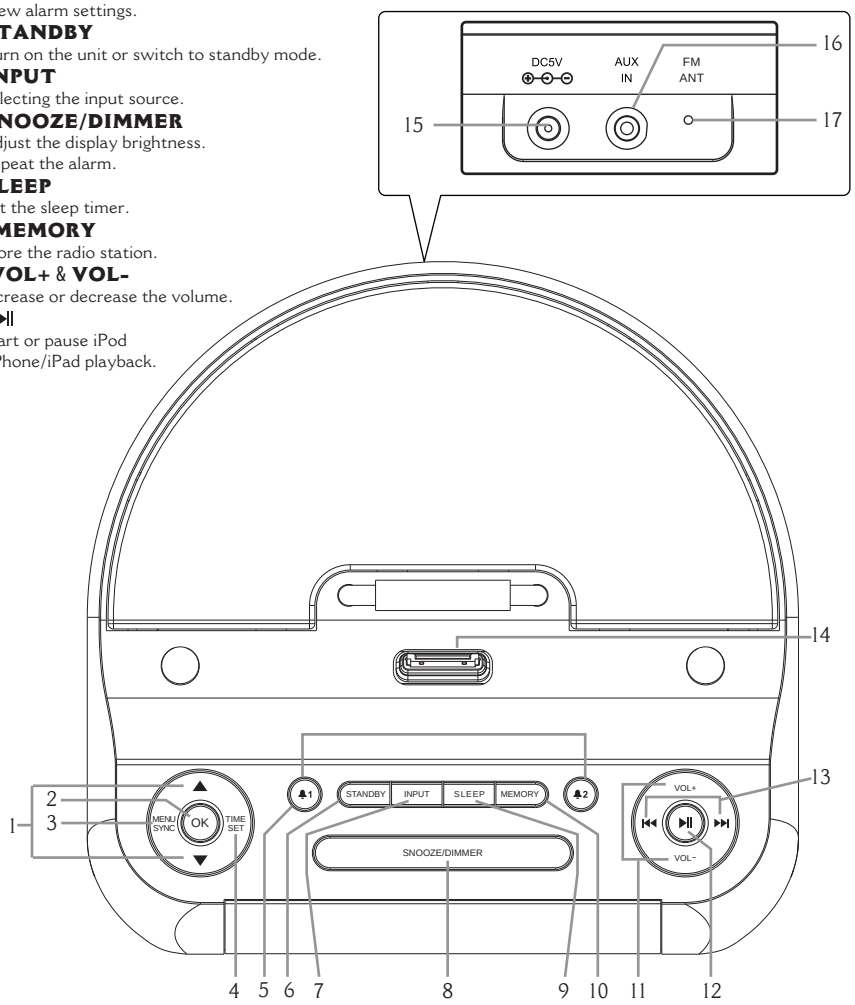

Install batteries

NOTE:You can only use DC power as power supply.Batteries are for backup purpose. They keep the clock operating in the event of a power interruption.

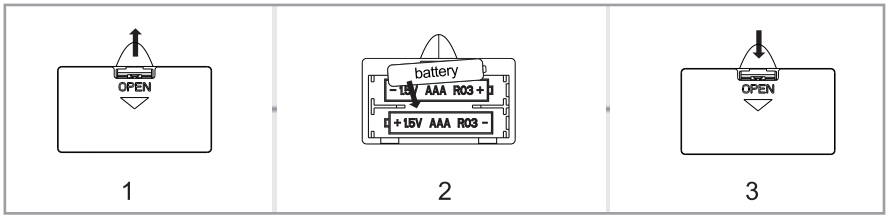

1.Open the battery compartment.
2.Insert 2 x AAA size batteries with correct polarity (+/-) as indicated.
3.Close the battery compartment.

Place the iPad into the dock

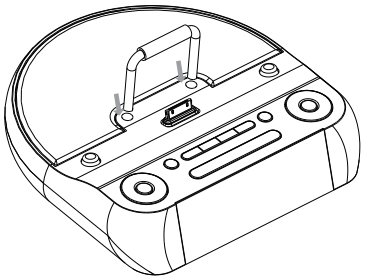

1. Plug the stand for iPad into the holes.

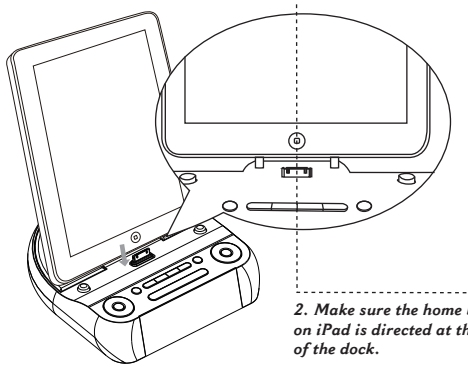

2. Make sure the home button on iPad is directed at the middle of the dock.

Getting Started

1.The unit will automatically switch to standby mode once the power source is connected. The display will show the current time in standby mode.
2.Switch on the unit from standby mode to playback mode by pressing the **STANDBY** button.
3.Press the **STANDBY** button again to switch off the unit from playback mode to standby mode.

Selecting the Input Source

In playback mode, press the **INPUT** button to select the desired audio source, FM, iPod/iPhone /iPad or AUX.

Adjusting the Volume

In playback mode, press **VOL+** and **VOL-** to adjust the volume. The volume level range from 00 to 32.

Time Synchronization

When the first time using this unit or after a power interruption, you can synchronize the time with iPod/iPhone/iPad. Plug your iPod/iPhone/iPad, switch to playback mode, and select iPod/iPhone/iPad mode. The time on the display "12:00" is flashing. Press and hold the **MENU** button until the display shows "SYC". Then the same time with iPod/iPhone/iPad will show on the display.

Tips: Not all the models of iPod/iPhone/iPad support time synchronization function.
The supported models include:

- ***iPod touch (4th generation)***
- ***iPod touch (3rd generation)***
- ***iPod touch (2nd generation)***
- ***iPod touch (1st generation)***
- ***iPod nano(6th generation)***
- ***iPod nano (5th generation)***
- ***iPhone 4***
- ***iPhone 3GS***
- ***iPhone 3G***
- ***iPhone***
- ***iPad***
- ***iPad 2***

Setting Clock Manually

1. In standby mode, press and hold the **TIME SET** button until "12H" flashes. Press ⏮ or ⏭ to set "12H"(12 hour format) or "24H"(24 hour format).
2. Press **TIME SET**, and "hour" flashes.Press ⏮ or ⏭ to set the hour.
3. Press **TIME SET** again, and "minute" flashes.Press ⏮ or ⏭ to set the minute. At last press **TIME SET** to confirm.
4. At any stage above, if no key is pressed for about 5 seconds, the last selected value is automatically saved and exit.

Setting Alarm

1. The unit has two sets of alarm, 🔔1 (ALARM1) and 🔔2 (ALARM2).
2. In standby mode, press 🔔1 button and 🔔1 icon will appear on the display. ALARM1 is activated. Press 🔔1 again to cancel and 🔔1 icon disappears.
3. In standby mode, press and hold 🔔1 until "hour" flashes. Press ⏮ or ⏭ to set the hour.
4. Press 🔔1 again, and "minute" flashes.Press ⏮ or ⏭ to set the minute.

5. Press 🔔1 again and press ⏮ or ⏭ to select one of BUZZ, FM RADIO or iPod/iPhone/iPad as the wake-up alarm, when the alarm mode icon will appear on the display.
   - When the alarm is set to FM radio, the radio frequency last used will be used as the alarm radio frequency.
   - If in case the iPod/iPhone/iPad wake-up mode is selected and no iPod/iPhone/iPad was plugged in, the BUZZ will sound instead.
6. At any stage above, if no key is pressed for about 5 seconds, the last selected value is automatically saved and exit.
7. The setup of ALARM2 is the same with ALARM1.

Tips:The alarm volume will increase gradually.

Snooze Function

1. Press **SNOOZE/DIMMER** button to silence the alarm sound temporarily for about 9 minutes, the alarm will active again after 9 minutes lapse. The snooze function is repeatable for 60 minutes.
2. To switch the alarm sound off, you can press 🔔1 or 🔔2 button.

Dimmer Function

Three levels of brightness are available by pressing **SNOOZE/DIMMER**.



Sleep Function

This function switches the unit from playback mode to standby mode after the specified time.

1. Press the **SLEEP** button repeatedly to select the sleep time. The cycle goes "OFF" means no sleep function.



2. After the sleep mode is activated, the **SLEEP** icon will appear on the display. And press the **SLEEP** button to display the remaining time before switching to standby mode.

FM Radio Mode

Tuning Radio Stations

1.In playback mode, press **INPUT** button to select the FM radio mode.
2.Tune to the desired radio frequency by pressing the ⏮ or ⏭.
3.Press and hold the ⏮ or ⏭ for 2 seconds to automatically scan until a strong signal is found(a station is received).

Storing Radio Stations

This unit can store up to 20 preset stations.
1.Press **MEMORY** button, the channel number begin to flash.
2.Press ▲ or ▼ to choose the desired channel to store.
3.Press **MEMORY** button to confirm and store the radio station.
4.In FM radio mode, press ▲or ▼to select the preset stations(channel number).

iPod/iPhone/iPad Mode

1.When docked, the iPod/iPhone/iPad will be charged automatically.
2.In playback mode, press **INPUT** button to select the iPod/iPhone/iPad mode, and the iPod/iPhone /iPad will automatically begin to play.

- Press ⏯ to play or pause the playback of music .
- Press ⏮ or ⏭ to select previous or next song; press and hold to fast-backward and fast-forward.
- Press **MENU**, ▲ , ▼ and **OK** buttons to control iPod/iPhone/iPad menu.

Tips:The MENU button has no function with iPad.

AUX Mode

1.Connect the audio output jacks of your auxiliary sound source (PC, MP3, etc.) to the AUX IN jack on the back panel of the unit.
2.In playback mode, press **INPUT** button to select AUX mode.

Specifications

General information

DC power: 5V⎓3A

Amplifier

Rated Output Power: 2 x 3W RMS
Frequency Response: 100~15KHz,±3dB
Signal to Noise Ratio: >65dB
Aux Input Sensitivity: 0.5V RMS

FM

Tuning Range: 87.5-108 MHz
Tuning grid: 100 KHz
Search Sensitivity: <28 dBf
Total Harmonic Distortion: <1.5 %
Signal to Noise Ratio: > 55 dB

Speakers

Speaker Impedance: 4 ohm
Speaker Driver: 50mm
Sensitivity: >82dB

Product specifications is subject to change without prior notice.

Troubleshooting

Warning: Never remove the casing of this apparatus.
To keep the warranty valid, never try to repairthe system yourself.
If you encounter problems when using thisapparatus, check the following points beforerequesting service.

No power.
- Make sure that the DC power is connected properly.
- Make sure that the batteries are inserted correctly.

No sound.
- Make sure the iPod/iPhone/iPad is securely connected.
- Adjust the volume.

The iPod/iPhone/iPad cannot be operated with this unit.
- Make sure the iPod/iPhone/iPad is securely connected.

The iPod/iPhone/iPad cannot be charged.
- Make sure the iPod/iPhone/iPad is securely connected.

The screen shows "This accessory is not supported by iPad"(iPod or iPhone).
- Make sure the iPod/iPhone/iPad is securely connected.
- Reconnect the DC power.

Key not functioning.
- Reinsert the backup batteries and reconnect the DC power.

Poor radio reception.
- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

The clock flashes "12:00" due to a power interruption.
- The battery is low. Replace the battery.

The radio, iPod/iPhone/iPad or buzzer alarm does not sound at the preset alarm time.
- Check that "🔔1" or "🔔2" is properly displayed.
- The alarm volume increase gradually.